

удобно управление със стилизиран дизайн




Работи само със сензорните ключове с безжична функция

27 отделни управляеми ключа




Управление в 3 различни стаи

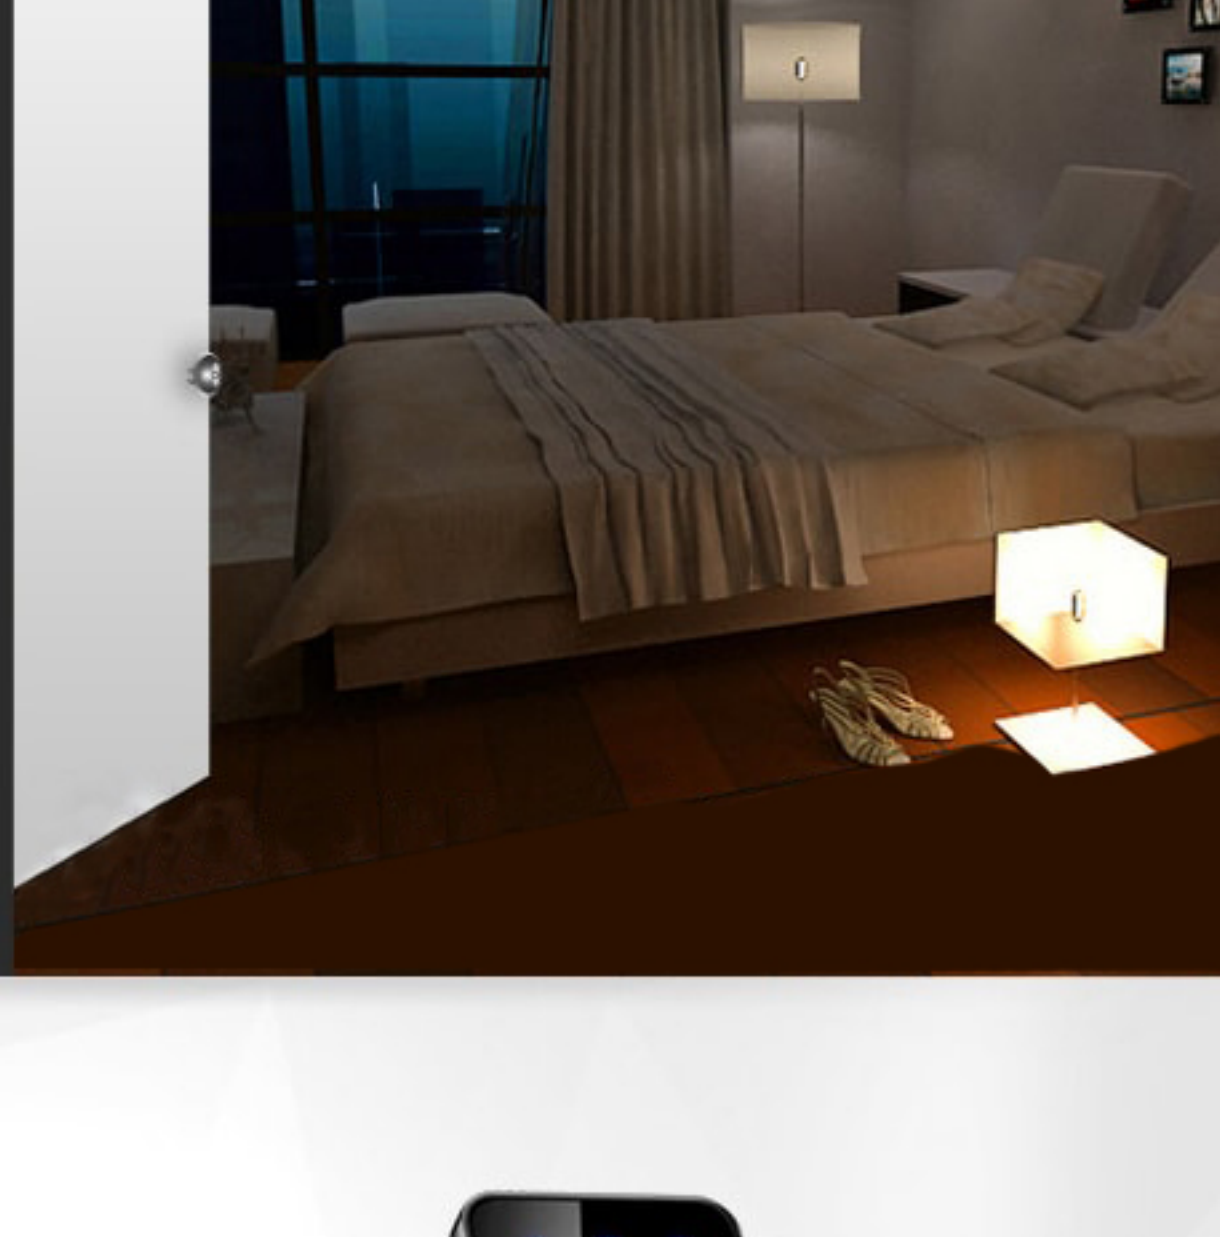


Възможност за "димирание"

задръжте цифрата на желания ключ и може да регулирате силата на светене на лампата

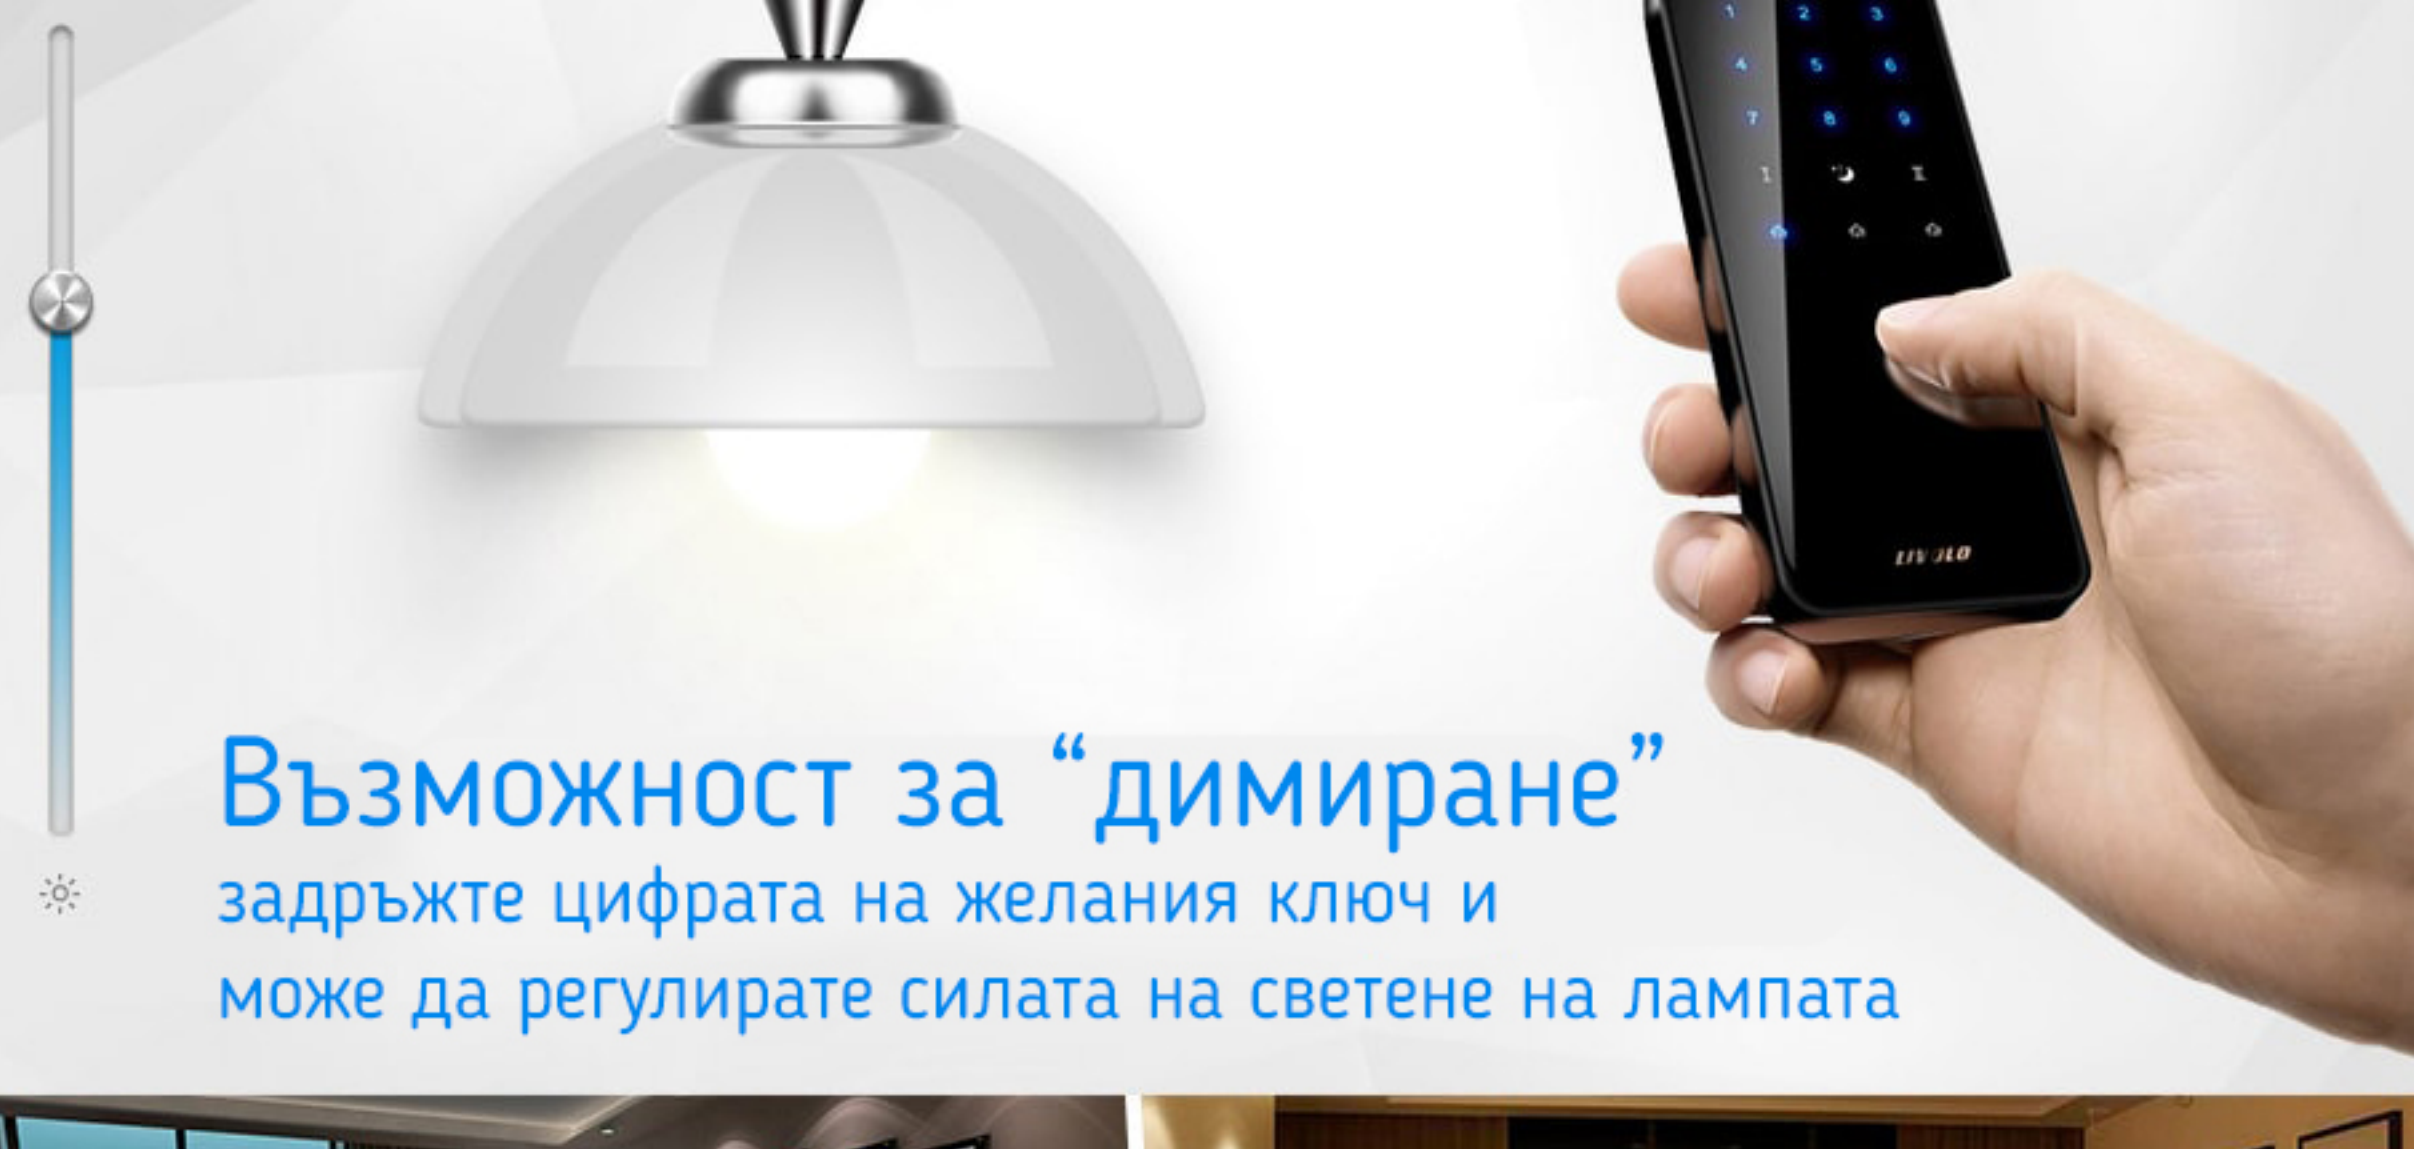


6 различни програми

вие сами определяте кога и в каква последователност да се включат една или повече лампи.

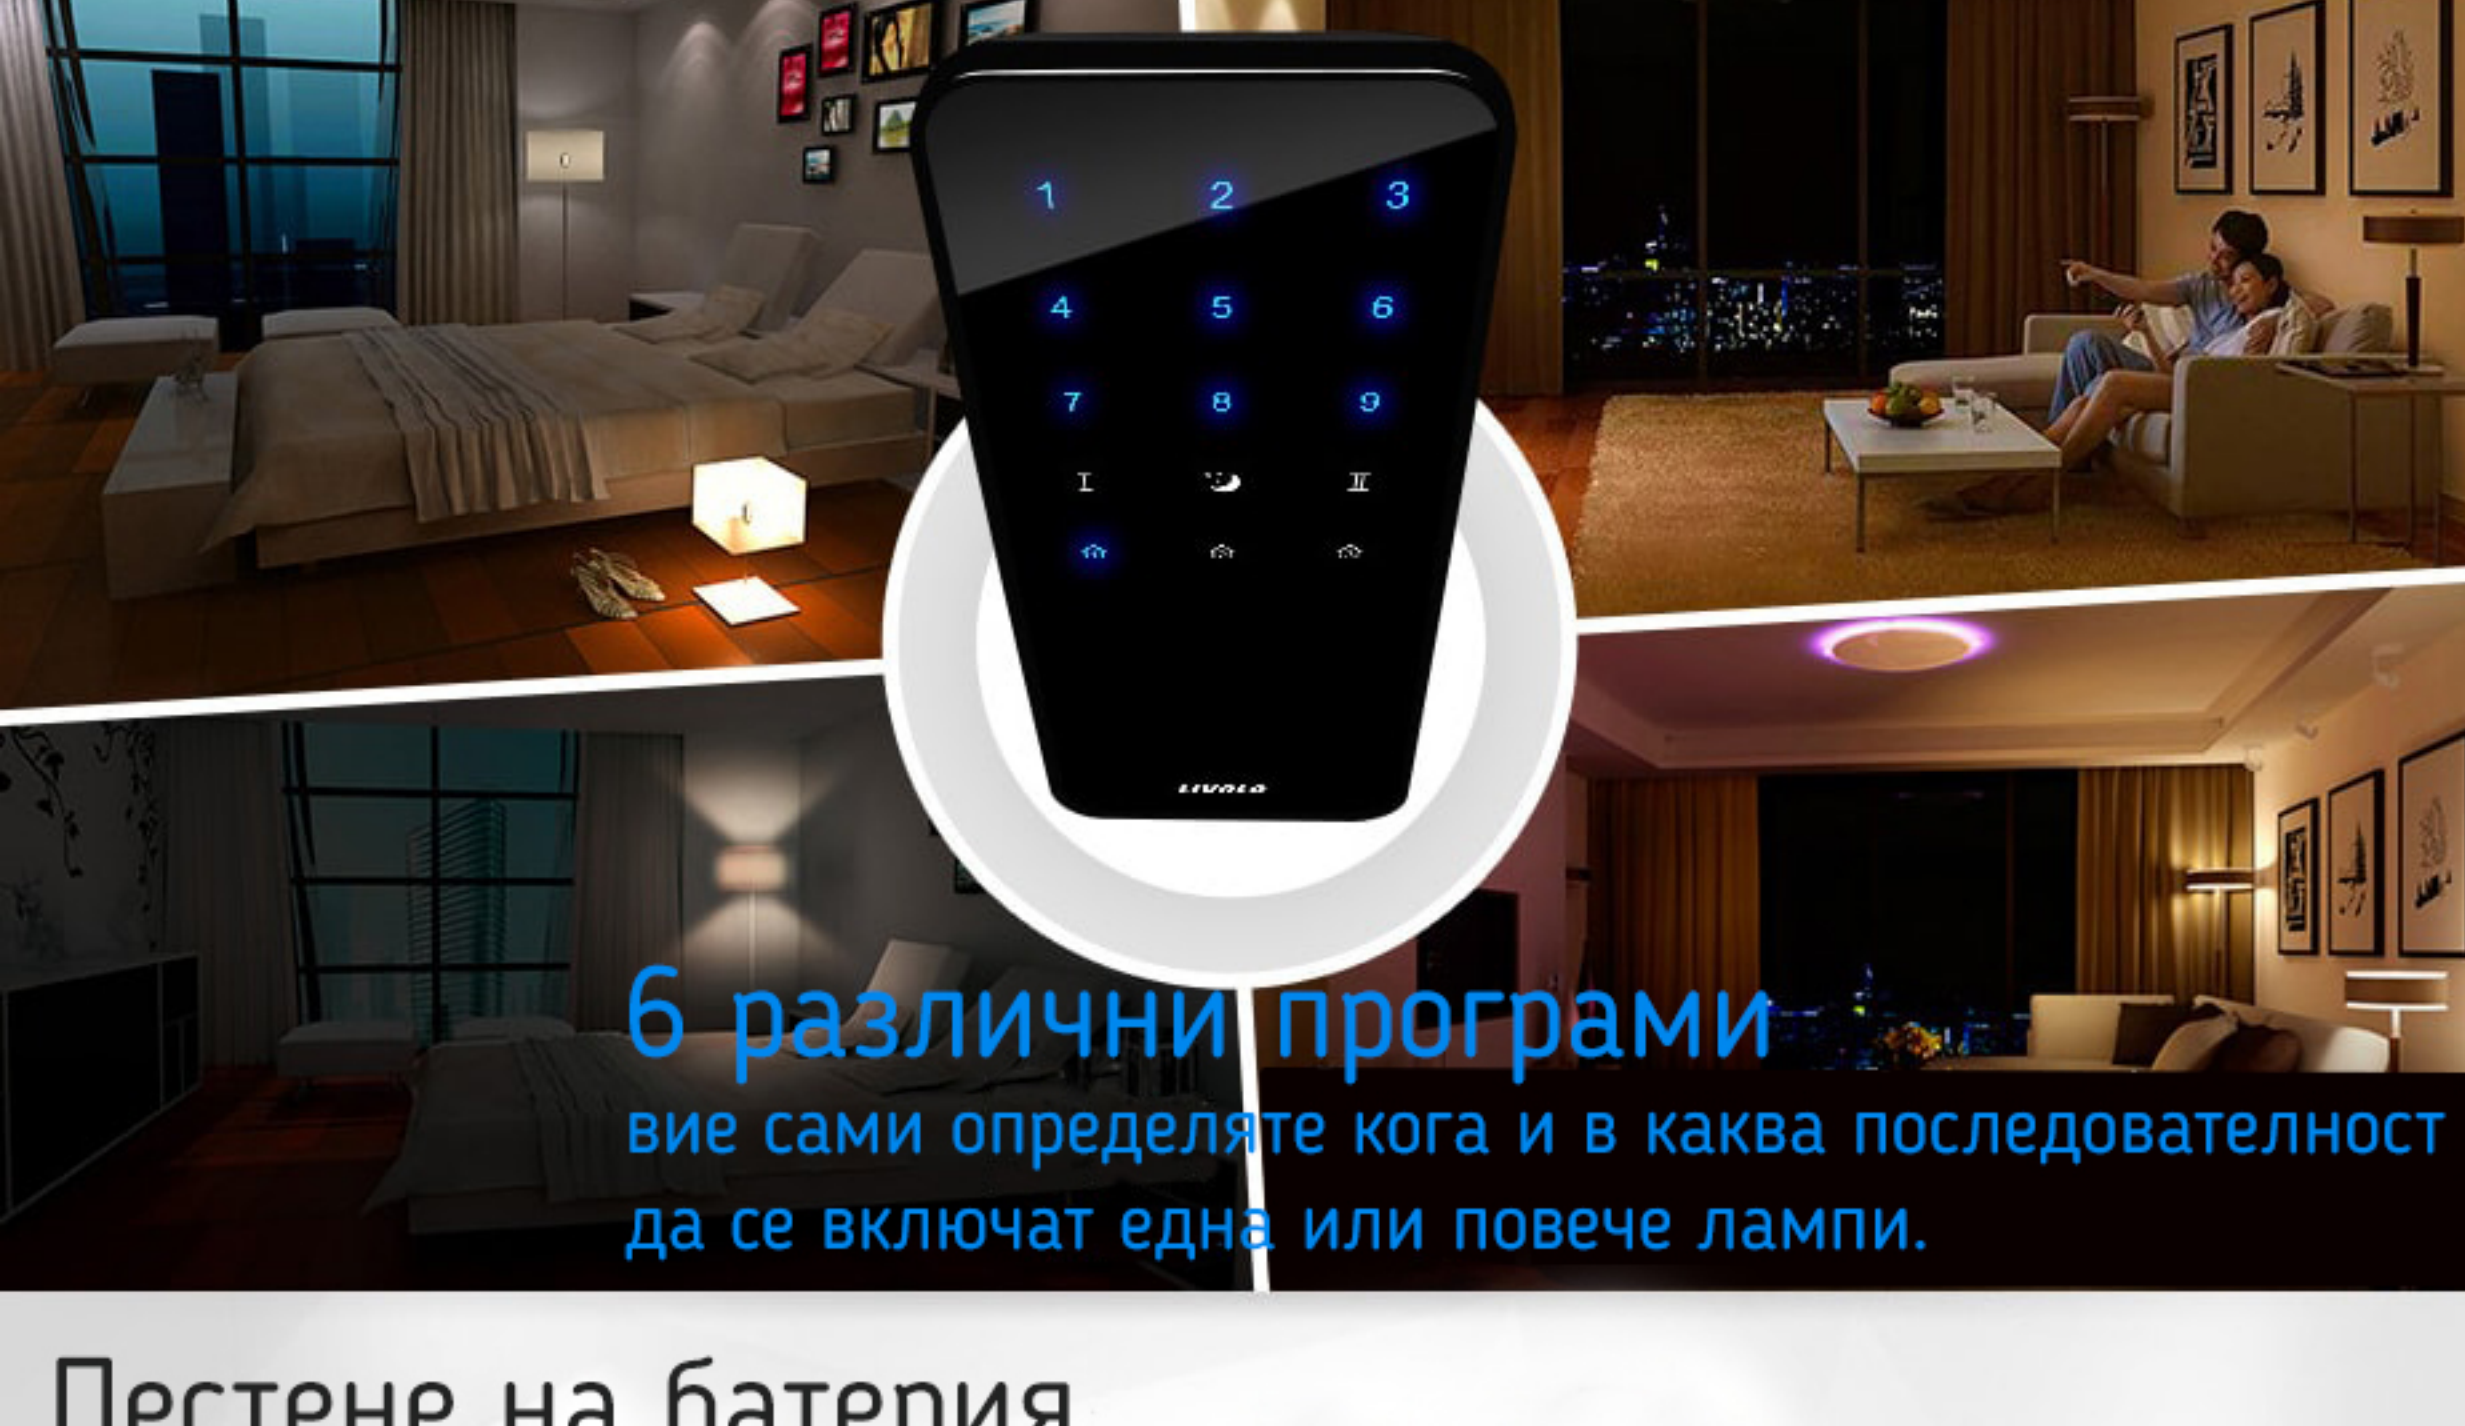

Пестене на батерия

20 секунди след последното използване преминава в режим standby.

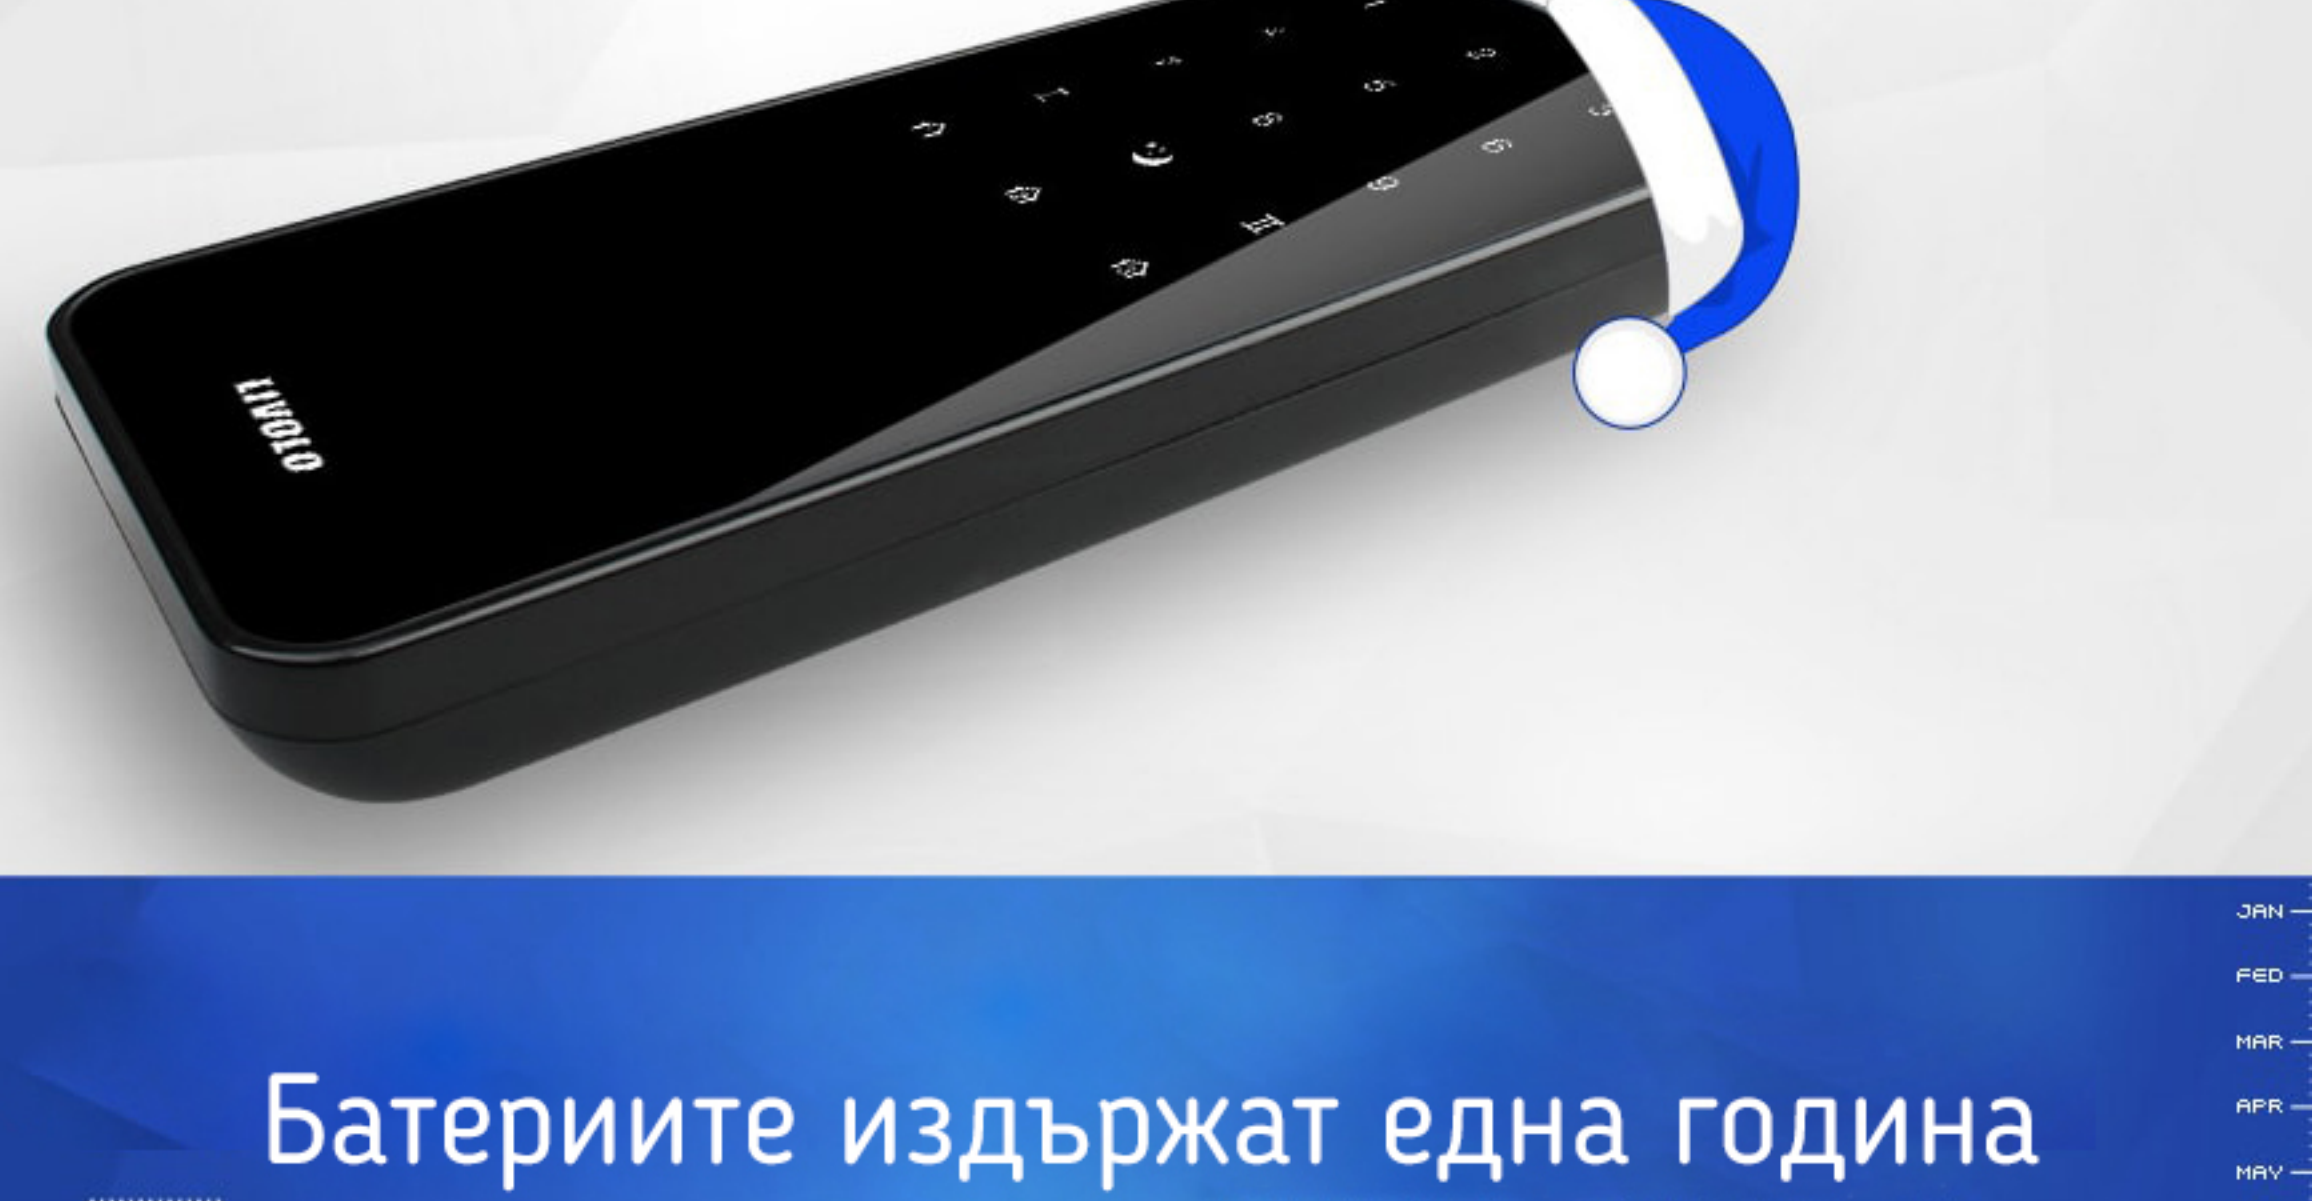

Батериите издържат една година



Remote Control Feature Overview

- 3 Room setting
- 6 Scene option
- 27 Circuit control
- 27 Dimmer control

Power /Trigger indication

2 Status

Functions

Remote control will go into dormant when standby in 15s, it will be awakened to run when pick up it.

When the button on the control is activated, all indicators turn off, when switch to dimming mode, the indicators flash.




Touch button

The 1-9 button can control 9 gangs apart when they are synchronized successfully.

The 1-9 button can be used for dimmable light after making the synchronization with a dimmer & remote switch.

All off

Hold the button for 1s, all the lights in the current room that have been synchronized with the remote will off.

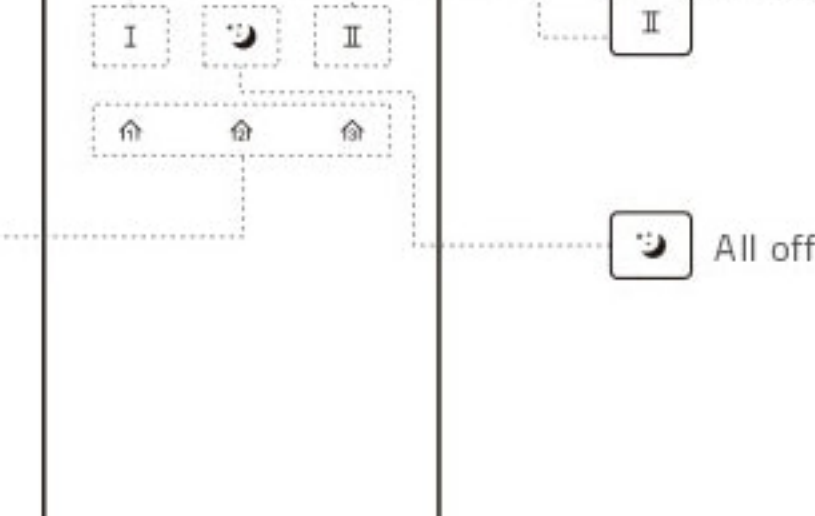

Radio Frequency

Dimmer

It will turn into dimming mode when touch any button of 1-9 for 1s.

Keep touching the button on the remote, the lamp will change from dark to bright until the brightest, so as dark to bright.

If loose the finger when dimming the light from dark to bright , repeat this process ,it will go on brightening up to the brightest .

Scene

Hold the I or II button for 1s to set scene.

Room

3 groups room setting, when touch the room button, the corresponding indicator will light.

Notes: the 1-9 button control different lamp in distinct room, the remote controller possesses 27 (9*3) remote control key and 6 scene (2*3) key.

Synchronizing instruction

Remote Synchronizing

Choose the room

Touch any 1-3 then the corresponding backlight will on.

Hold the gang of switch for 5S and take away when hear a sound of 'DI'.

Touch the button of remote (like of remote (like button '1')) It is synchronized successfully when hear a sound of 'DI'

Note:

- 1.To cancel the synchronization: Repeat the above process, and when you hear two sounds of 'DI' during step3, then the synchronization is cancelled successfully.
- 2.Please remember the room number, as different room different button.

Attentions:

1. Set the code no more than the specified number for each gang, if exceed, the first code will be replaced automatically.
2. Set the scene no more than the specified number for each switch, if exceed, the first scene will be replaced automatically.
3. Hold any button for 10S, and take away when hear 2 sounds of 'DI', the synchronous code and scene are completely cancelled.
4. Don't touch the button frequently in 2 seconds ,otherwise the operation will be ignored .
5. Replace the batteries in time, as the receiving distance will be shortened if the voltage of battery is too low.
6. Don't forget to remove the batteries if you don't use the remote controller for a long time.
7. Battery specification : Two AAA batteries

Scene Synchronizing

Choose the room

Touch any 1-3 then the corresponding backlight will on.

Hold any gang of switch for 5S and take away when hear a sound of 'DI'.

Touch the button of switch to set the scene as you like.

Touch the scene button for 1S It is synchronized successfully when hear a sound of 'DI'.

Note:

- 1.If new scene should be added to the scene button (like button 'II'), repeat the above process.
- 2.To cancel the synchronization: Repeat the above process, and when you hear two sounds of 'DI' during step4, it is cancelled successfully.
- 3.Please remember the room number, as different room different scene button.

	1 Way		
	1-3 Gang	4 Gang	2 Way
Remote control code	8	3	4
Scene setting	8	3	1