

## Falttüre

### mit Schließprofilschiene und Magnethalter

#### Lieferumfang:

Kunststoff-Falttüre

1 Stk. Schließprofilschiene

1 Stk. Gleitschiene


Befestigungsschrauben

2 Stk. Griffe mit Spannstiften und Magnethalter

Bevor Sie mit der Montage beginnen, überprüfen Sie den Lieferumfang und lesen Sie die Anleitung sorgfältig. Die beigelegten Schrauben können bei der Montage in Holz- bzw. Kunststoffzargen verwendet werden. Erfolgt die Befestigung am Mauerwerk oder in Stahlzargen, sind nach Bedarf entsprechende Schrauben und Dübel zu besorgen.

#### 1. Falttüre in der Höhe kürzen


Höhe der Türzarge exakt ausmessen. Falttüre aufklappen, Gleitschiene auf die Gleiter schieben. Gemessene Türzargenhöhe auf die Falttüre - ab Oberkante der Gleitschiene - übertragen. Die Gleiter müssen dabei in der Schiene aufliegen. Die Falttüre ist, damit sie nicht am Boden oder Teppich streift, um ca. 5 mm kürzer als die Zargenhöhe abzulängen. Kreuzschlitzschrauben an der Türunterseite entfernen. Die Türe nur im aufgeklappten Zustand mit einer Feinsäge kürzen. Nach dem Kürzen entfernte Schrauben wieder einsetzen.

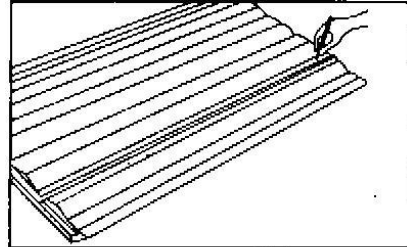

#### 2. Gleitschiene kürzen und befestigen

Türzargen-Breite oben ausmessen. Gleitschiene, abzüglich ca. 2-4 mm vom gemessenen Maß, kürzen.

Schiene im Mittel des oberen Türrahmens so anlegen, daß auf beiden Seiten ein Abstand von 1-2 mm zu den Seitenrahmen entsteht. Befestigen Sie zunächst die Gleitschiene in der Mitte mit nur einer Schraube, um ein Ausschwenken zu ermöglichen.

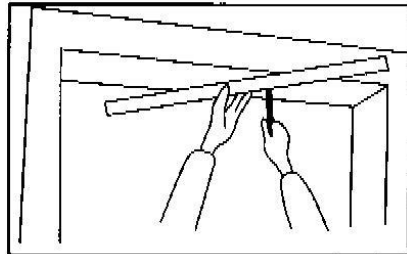


#### 3. Falttüre einschieben, Paket befestigen

Nehmen Sie hierzu die Schließprofilschiene zu Hilfe, die zunächst auf evtl. erforderliche Länge gebracht wird. Das Höhenmaß - Gleitschieneunterkante bis Boden - ist dabei zu beachten.


Schließprofilschiene senkrecht unter die Gleitschiene halten und die vorhandenen Löcher auf den Türrahmen übertragen.

Schwenken Sie die Gleitschiene aus der Türöffnung und führen Sie das Lamellenpaket in die Schiene. Die Gleitschiene zurückschwenken und festschrauben. Die Endlamelle des Paketes nun an den Türstock schrauben.

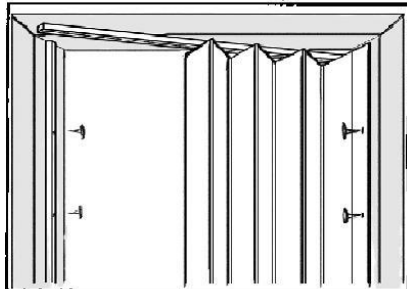

#### 4. Schließprofilschiene, Magnethalter u. Griffe montieren

Schließprofilschiene - wie unter Pos. 3 beschrieben - auf der zu schließenden Türseite senkrecht zur Gleitschiene an der Türzarge verschrauben. Höhenabstand der Magnete in der Falttüre auf die Schließprofilschiene übertragen und mit den beigelegten langen Schrauben befestigen. Spannstifte in die Bohrungen der Griffe kräftig hineinschieben, anschließend in die vorhandenen Löcher der Zuglamelle stecken, Griffgegenstück aufdrücken.

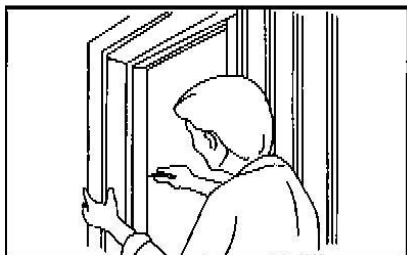

**Reinigung und Pflege:** Mit einem Staubtuch reicht ein gelegentliches Abwischen. Größere Verschmutzungen mit einem feuchten Tuch und mildem Reinigungsmittel entfernen und nachtrocknen.

**Keine Scheuermittel oder lösungshaltigen Reiniger verwenden!**

## Anleitung für Zusatzlamellen für Falttüren

Zum Anbringen der Zusatzlamellen obere und untere Befestigungsschrauben an der Anschlaglamelle (Türgriffseite) der Falttüre entfernen, Lamelle nach unten aus der Führung ziehen, Zusatzlamellen einschieben.

Evtl. Lamellen der gesamten Türe - wie in der Anleitung für Falttüren beschrieben - kürzen. Lamellen mit beigelegten Schrauben in umgekehrter Reihenfolge wieder befestigen.

# Folding door

with closing bar and magnetic holder

## Scope of delivery:

Plastic folding door

1 x closing bar

1 x runner


Fastening screws

2 x handles with spring pins and magnetic holder

Before you begin assembling, check the scope of delivery and read the instructions carefully. The enclosed screws can be used for assembling wooden or plastic frames. If it is to be fixed to masonry or steel frames, corresponding screws and pins must be obtained as required.

### 1. Cut the height of the folding door


Measure the exact height of the door frame. Open the folding door and fit the runner onto the slider. Mark out the measured door frame height onto the folding door - from the top edge of the runner. The slider has to rest in the track. The folding door must be cut to approx. 5 mm shorter than the frame height, so that it does not touch the floor or carpet. Remove the crosshead screws from the bottom side of the door. The door should only be cut to size when opened and with the use of a back saw. After cutting, the removed screws can now be replaced.

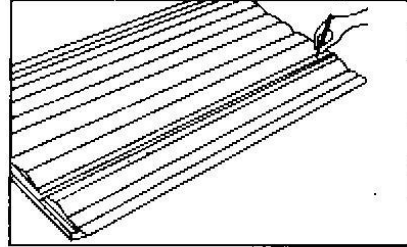

### 2. Cut and fix the runner

Measure the door frame width above. Cut the runner approx. 2-4 mm less than the measurement taken.

Attach the track to the centre of the upper door frame so that there is a gap of 1-2 mm from the side frames on both sides. Firstly fix the runner in the centre, using only one screw so that it can swivel outwards.

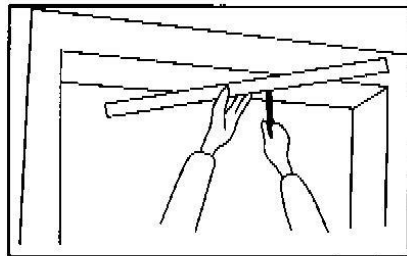


### 3. Insert the folding door, fix the panel

Make use of the closing bar, which is initially set to possible required lengths. The height measurement - from the lower edge of the runner to the floor - must thus be observed.

Hold the closing bar vertically under the runner and mark out the available holes onto the door frame.

Swivel the runner from the door opening and guide the panels into the track. Swivel the runner back into place and screw in tightly. Now screw the end panel to the door frame.

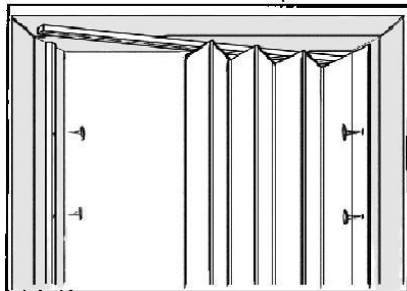


### 4. Assemble the closing bar, magnetic holder and handles

Screw the closing bar (as described in Position 3) to the door frame on the closing side of the door in a vertical position to the runner. Mark out the height gap of the magnet in the folding door onto the closing bar and fix using the long screws enclosed. Firmly insert the spring pins into the holes on the handles, then push through the available holes in the leading panel and affix the handle counter piece.

**Cleaning and care:** Occasional dusting with a duster is sufficient. Remove coarser dirt with a damp cloth and mild cleaning agents and then dry.

**Do not use any scouring agents or solvent cleaners!**

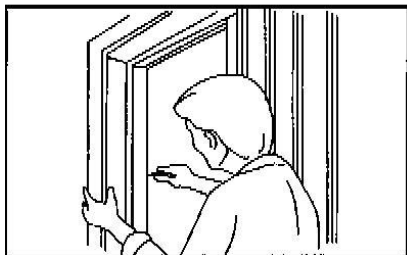

## Instructions for the additional panels of the folding door

To attach the additional panels, remove the upper and lower fastening screws from the leading panel (door handle side) of the folding door, pull the panel down out of the guide and insert the additional panels.

Cut potential panels for the whole door (as described in the instructions for folding doors). Fix the panels again in reverse order with the enclosed screws.

PVC folding door

100x200 cm